


CLIPSAL[®]

by Schneider Electric

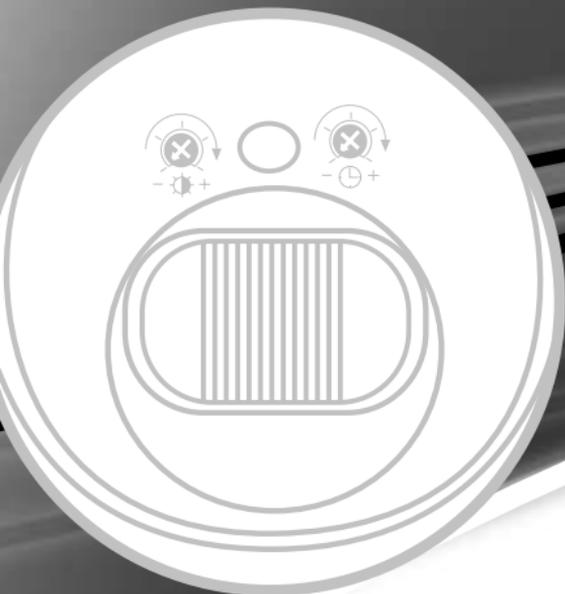

Indoor Infrascan[®] Passive Infrared Motion Sensor

751
Series



Installation Instructions

INFRASCAN[®]
PASSIVE INFRARED SENSOR

Please leave these instructions at
the installation site.

Table of Contents

1.0	Product Range	3
2.0	Description	3
3.0	Product Selection	3
4.0	How it Works.....	4
5.0	Identification of Parts.....	5
6.0	Installation Location.....	6
7.0	Field of View	6
8.0	Mounting Procedure	7
9.0	Wiring Diagrams – 751 2 Wire Infracan	8
10.0	Wiring Diagrams – 751R 3 Wire Infracan.....	9
11.0	Commissioning.....	10
11.1	Set Up For Walk Test.....	10
11.2	Adjustment of 'Time-On' and 'Light-Level' Settings	10
12.0	Troubleshooting	11
13.0	Technical Specifications	12
14.0	Warning: Using the 751 with Special Loads.....	14
15.0	Warranty	16
16.0	Technical Support and Troubleshooting.....	16

1.0 Product Range

751 Indoor Infracan, 240V a.c., 50Hz, 2 Wire, 2A, 20 Minute

751R Indoor Infracan, 240V a.c., 50Hz, 3 Wire, 10A, 20 Minute



2.0 Description

Packed with features that have made Clipsal the leader in Passive Infrared (PIR) motion sensor technology, the 751 Series Indoor Infracan is the next generation of the constantly evolving family of Clipsal PIR sensing devices.

The compact, unobtrusive appearance of the unit, combined with simplified installation and a range of new features, make it the smart light switch for the modern era.

The unit is designed to monitor the immediate environment, and detect people moving within its 'Field of View'. When movement is detected, the unit will activate an electrical load, such as a light, in response to that movement.

Designed and developed in Australia, the unit offers benefits in security, energy management, hospitality and true hands-free switching convenience in a wide range of domestic and commercial applications.

3.0 Product Selection

Be sure to select the appropriate Infracan product to suit your application:

- The 751 is a 2 wire (does not require Neutral connection), and can only switch a limited range of load types.
- The 751R is a 3 wire device (requires Neutral connection to operate) capable of switching a wide range of load types.

	Catalogue Number	Neutral Required	Maximum Load*
	751	NO	2A
	751R	YES	10A

* Please refer to Technical Specifications for further information about compatible load types.

4.0 How it Works

With power applied and a suitable load connected, the infrascan will be able to detect any moving infrared source (for example a person) that may intrude upon its 'Field of View'.

The operation of the Infrascan may be set by the user. The unit has two adjustments on the underside of the sensor head for 'Light-Level' and 'Time-On' duration.

The 'Light-Level' adjustment activates the load depending on the ambient light level in the 'Field of View' of the sensor. This adjustment can be set to allow the Infrascan to operate the load at any light level between full daylight and almost complete darkness. For example, the user can ensure the load is only activated when movement is detected at night time. During the day time, when there is adequate natural light, the unit can be set so it does not activate the load, as it is not necessary to do so.

The 'Time-On' adjustment varies the time span that the load will remain on for after the Infrared source moves out of, or stops moving, within the 'Field of View'. The load will automatically be switched off after the 'Time-On' period has elapsed. Any period between five seconds and approximately 20 minutes may be set by the time adjustment screw.

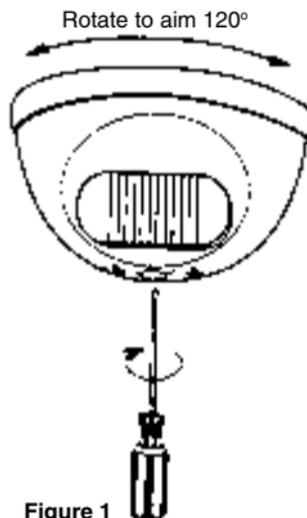


Figure 1

5.0 Identification of Parts

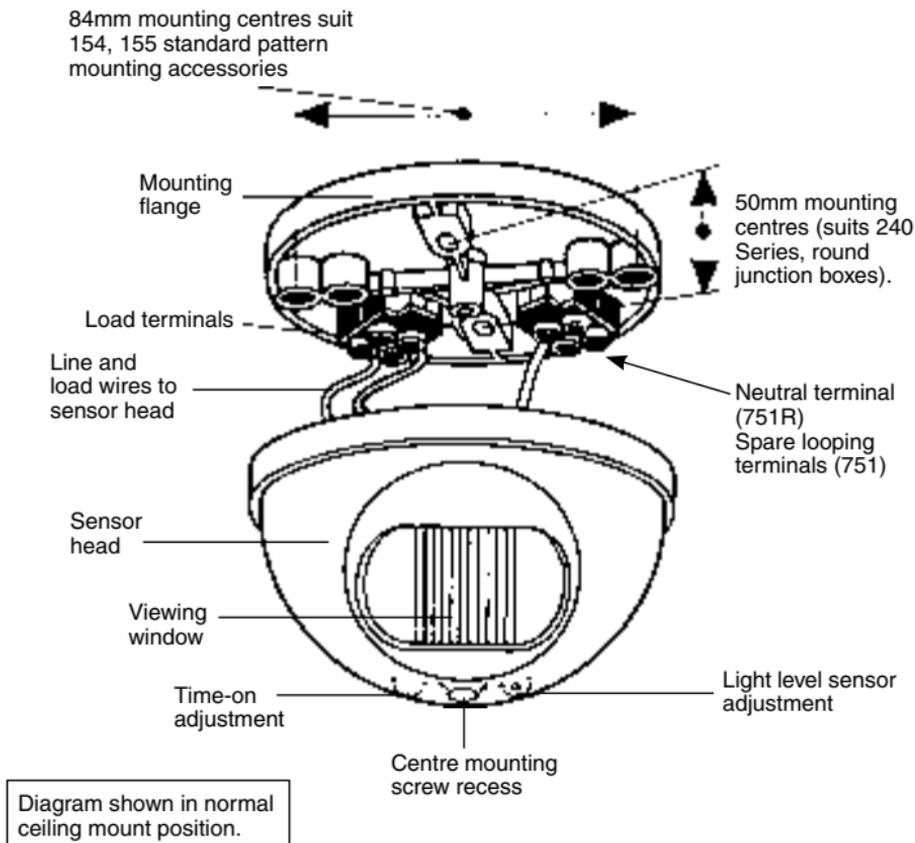


Figure 2

Note:

- The sensor head is specially designed to give optimum performance. Under no circumstances should it be tampered with. There are no user serviceable parts inside.
- Do not apply any pressure on the actual sensor lens itself, as this may damage the lens, and adversely affect the performance of the unit.


6.0 Installation Location

An Infrascan must be positioned correctly to ensure effective operation. The 'Field of View' is optimum when the sensor head is mounted in a vertical position at a height of 2.4 metres and the approach path is across the face of the sensor.


Note:

- Do not mount the Infrascan close to objects which can create rapid temperature changes eg. air conditioning vents, heater flues, moving water (ie. fountains and sprinklers). Avoid locations where condensation is likely to form on the lens.
- Do not mount the Infrascan on any surface that is subject to movement due to wind or other causes.
- In all cases, locate the Infrascan so that the approach path is across the 'Field of View' and not directly towards the Infrascan.

7.0 Field of View

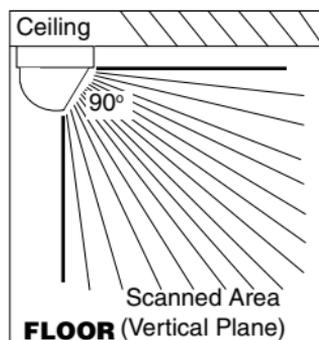


90° Viewing Angle

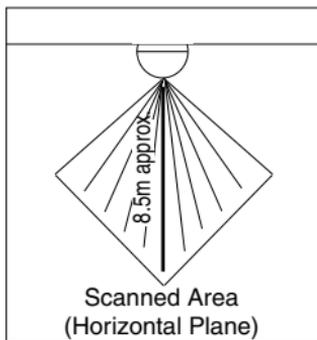

Detection Area 6m x 6m

Suitable For:

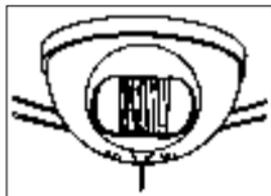

Ceiling Mounting



Wall Mounting

Note:

- The absolute range of all PIR detectors is subject to variation because of daily differences in the background temperature characteristics and type, or amount, of clothing worn. Rapid and large changes in temperature may be detected even if they appear to be well beyond the stated range.

8.0 Mounting Procedures

Step 1:

Fit the mounting base in the required location. The unit is suitable for either:

- Ceiling mounting
- Wall mounting.

Orientate the base such that the small arrow indicating the field of view is pointing toward the required detection area.

Step 2:


Terminate incoming wiring on the appropriate terminals as marked. Refer to Section 9 Wiring Diagrams, for further information about wiring for different applications.

Line and load wires to sensor head




Neutral wire to sensor head (751R only)

Step 2
Terminate wiring

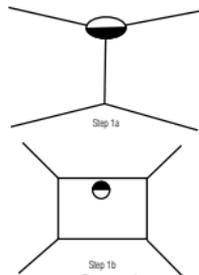

Step 1
Install the mounting base

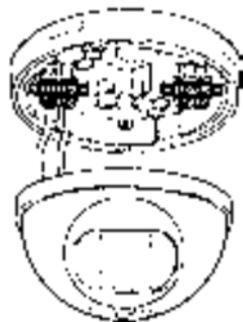


Step 3:

Fit the sensor head to the mounting base via the single, centrally located mounting screw (between the 'Time-On' and 'Light-Level' adjustment screws).

Note:

- If leads from the sensor head are disconnected from the terminal block:
 - 751 - Reconnect either lead to the Line terminal and the remaining lead in the Load terminal.
 - 751R - Connect brown to Line, white to Load and blue to Neutral terminal.
- Do not fully tighten the screw until the sensor head has been aimed at the area you wish to monitor. The sensor allows up to 120 degrees rotational movement, allowing it to be aimed in the required direction.


Rotate to aim 120°

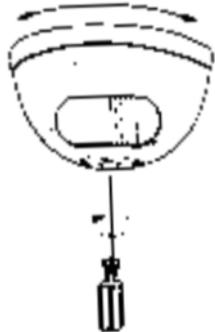


Step 3
Fit the sensor head to the mounting base

9.0 Wiring Diagrams - 751 2 Wire Infrascan


1a) Automatic operation

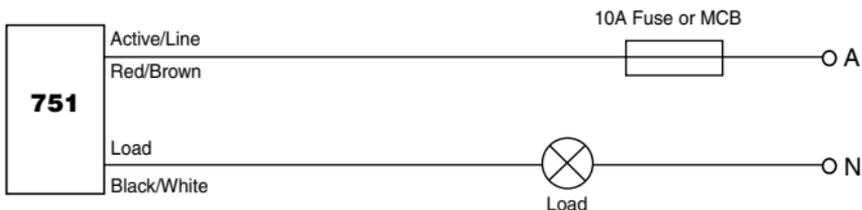

1b) Automatic with manual override ON or OFF

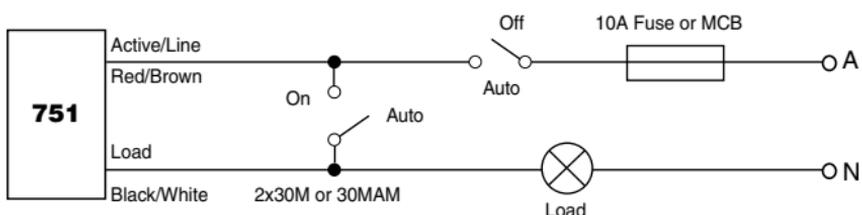

1c) ON, OFF or AUTOMATIC operation using a three position switch

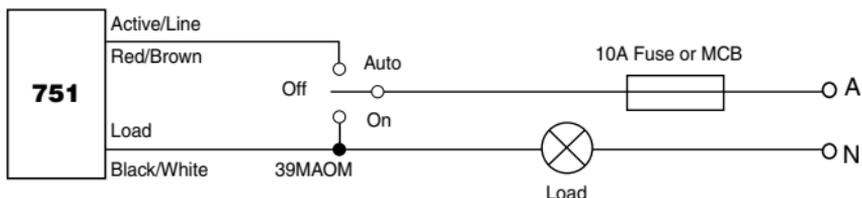


Note:

- When switching to AUTO for any of the above configurations the Infrascan will turn on. Allow 30 seconds plus 'Time-On' period for the sensor to stabilise for normal operation. Wiring diagram 1(a); without override switches is preferred as there is no settling period.
- More than one 751 CANNOT be connected in parallel to a common load. If parallel connection of multiple devices to control a common load is required, use Cat. No. 751R.




10.0 Wiring Diagrams - 751R 3 Wire Infracan


2a) Automatic operation

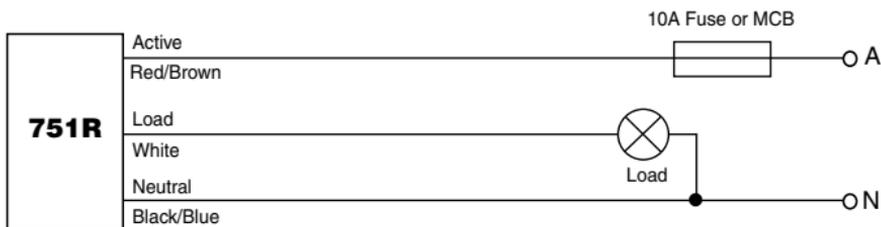

2b) Automatic with manual override ON or OFF

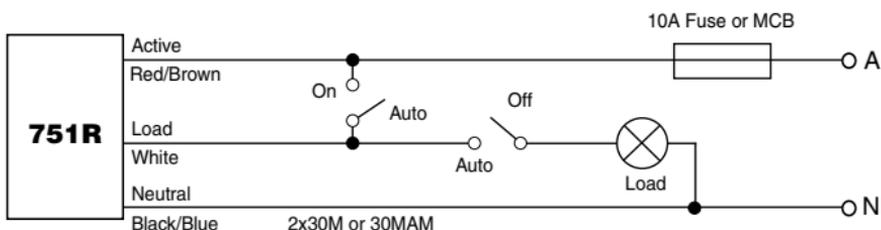

2c) ON, OFF or AUTOMATIC operation using a three position switch

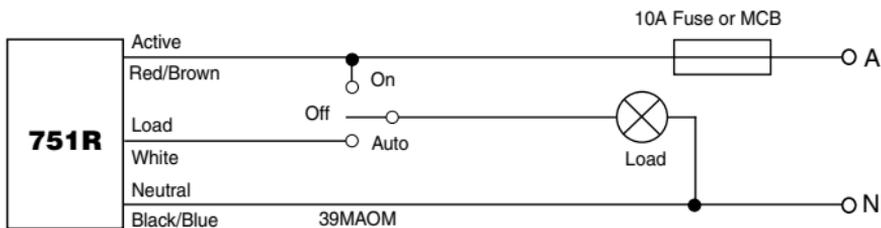

Warning:

- It is illegal for persons other than licensed electricians or persons authorised by legislation to work on fixed wiring of any electrical installation. Penalties for conviction are severe.
- Installation must be carried out in accordance with local wiring rules (AS/NZS3000 Australia and New Zealand).



11.0 Commissioning

When setting the 'Time-On' or 'Light-Level' adjustments keep clear of the 'Field of View' when assessing the effect of the adjustment.

11.1 Set Up For Walk Test

1	Connect unit to mains power and allow at least 30 seconds for the unit to stabilise before conducting any tests.
2	Set the 'Time-On' adjustment fully anticlockwise (5 second timer set).
3	Set the 'Light-Level' sensor adjustment fully anti-clockwise (unit set to respond in light or dark conditions).
4	Loosen the centre mounting screw slightly, and aim the sensor head towards the desired 'Field of View'. Tighten the centre mounting screw.
5	Walk slowly around the area in the desired 'Field of View' to confirm the load is activated from within the desired area. <ul style="list-style-type: none"> · Check that the unit responds appropriately when entering the room. · Check that the unit does not trigger unnecessarily when walking past open entry ways (eg. adjoining hallway or corridor). If necessary, re-aim the sensor head.
6	Set the 'Light-Level' as desired for activation at dusk for normal operation.
7	Set the 'Time-On' interval to the desired time for normal operation.



11.2 Adjustment Of 'Time-On' and 'Light-Level' Settings

Time-On Adjustment

Adjustment Range: five seconds to 20 minutes.

Rotate clockwise to set required time-out period.

a	Minimum setting (five seconds).	<p>a</p>	<p>b</p>	<p>c</p>
b	Set for areas with constant occupation but infrequent movement.			
c	Set for areas with less occupation but constant movement.			

Light-Level Adjustment

Adjustment Range: one lux to full sunlight.

Rotate clockwise to avoid having load activated when natural light is adequate.

a	To activate the load at dusk, set adjustment to this area.	<p>a</p>	<p>b</p>	<p>c</p>
b	Load activated at night only.			
c	Load activated both day and night.			

12.0 Troubleshooting

Problem	Possible Cause	Possible Action
Light turns on for no apparent reason.	Momentary power failure.	None, unit will reset after 'Time-Out'.
	Unseen target.	Check for animals, eg dogs/cats etc.
	Extreme draughts of hot and cold air.	Check doors, windows or air conditioning outlets.
	Trees/bushes moving in the wind.	Re-aim sensor head.
	Vehicular or pedestrian traffic on edge of 'Field of View'.	Re-aim sensor head.
Light turns on during daylight.	Wrong setting on 'Light Adjustment'.	Reset according to 'Commissioning' Instructions.
Lights do not turn on in dim and dark conditions.	Wrong setting on 'Light Adjustment'.	Reset according to 'Commissioning' Instructions.
	Light globe blown.	Replace light globe.
Light remains permanently on.	Manual override switch fitted and set to 'Manual'.	Reset according to 'Commissioning' Instructions.
	Moving infrared source being detected. Note: Do not mount too close to objects which can change temperature rapidly, eg. air conditioner vents, heater flues, moving water (ie fountains, sprinklers).	Remove unwanted infrared source. If unable to resolve, blank off viewing window. Light should turn off after 'Time-Out'. If light still remains on, call installer.

Note:

- Take care not to scratch or damage the translucent window on the front of the Infrascan, as it forms part of the optical detection system. For continued optimum performance ensure that the window is cleaned periodically with mild soap, water and a soft cloth.

13.0 Technical Specifications

Catalogue Number	751	751R
Operating Voltage	200 – 265V 50Hz a.c.	
Maximum Load Current	2A	10A
Minimum Load (Watts) *	40W	0W
Maximum Off-State Leakage Current	5mA	0mA
Stand-By Power Consumption	< 1W	< 1W
Conductors Required	2 Wire	3 Wire
Neutral Required	NO	YES
Operating Temperature Range	0° - 40°C	
Warm-Up Time	30 seconds	
Rated Detection Field at Maximum Sensitivity **	6m x 6m, 8.5m from sensor head. head rotatable through 120°	
Optimal Mounting Height for Rated Detection Field	2.4 metres	
Timer Delay Range	five Seconds to 20 minutes, user adjustable****	
Light Level Inhibit Threshold	Continuous from one lux to full sunlight, user adjustable	
Mounting Surface	Wall or ceiling mount (flat surface required)	
Mounting Centres	50mm, 60.3mm, 84mm	
Overall Dimensions	100mm diameter x 57mm high	
Cables Accommodated	3 terminals, up to 1 x 2.5mm ² cable per terminal	

Catalogue Number	751	751R
Compatible Load Types	 Incandescent  240V Halogen  Iron Core Transformers***	 Incandescent  240V Halogen  Fluorescent  Iron Core Transformers  Electronic Transformers M Small Motor Loads 5A Shaded Pole Induction Motors 5A Max (exhaust fans) Split Phase Induction Motors 5A Max (ceiling fans)
Incompatible Load Types	 Electronic Transformers  Fluorescent Loads  Discharge Lamps M Motor Loads	N/A
Specifications Typical @ 240V a.c., 25°C		
No user serviceable parts inside.		
This product is recommended for INDOOR USE ONLY.		

* The 751, 2 Wire Infrascan must be connected to a minimum 40W load, unless the 31CAP (sold separately) is fitted. Failure to do so may cause unexpected or erratic switching of the load.

** The range specifications given are based on a 90kg person travelling at a speed greater than one metre per second across the field of view, where there is a temperature differential greater than five degrees celsius between the person and the background. Objects that are hotter or moving faster (eg. motor vehicle on nearby roadway) may be detected at greater distances. A person covered in heavy clothing or walking directly towards the sensor may not be detected until they get much closer to the unit.

*** Only iron core transformers compatible with electronic switches may be used to ensure compliance with IEC 60669-2-1.

**** Other models are available with longer Time-Out ranges, designated 751Rxx (where xx is the Time-Out period in minutes).

- 751R30 – 30 minute Time-Out
- 751R60 – 60 minute Time-Out
- 751R120 – 120 minute Time-Out

14.0 Warning: Using the 751 with Special Loads

Small Loads (<40W)


The 751 product can only drive loads greater than 40W. If you wish to drive a smaller load, the 31CAP Load Correction Device is required to be fitted in parallel with the load. For example: when driving a single contactor, be sure to use the 31CAP.

Loads which are Sensitive to Leakage Currents

The 751 is a two wire device. Two wire devices draw their power through the load. If this device is used in conjunction with a load which cannot provide enough continuous load current in the off-state, or the load is sensitive to a high off-state leakage current (for example: relays, contactors, various loads with built-in electronic control etc.) a 31CAP Load Correction Device must be connected in parallel with the load.

Small (Non-Power Factor Corrected) Fluorescent Loads

When a 31CAP is fitted, some small non-power factor corrected fluorescent loads may be controlled using the 751. Success varies from manufacturer to manufacturer. Recommend testing before installation. Installation must be compliant with local wiring rules.

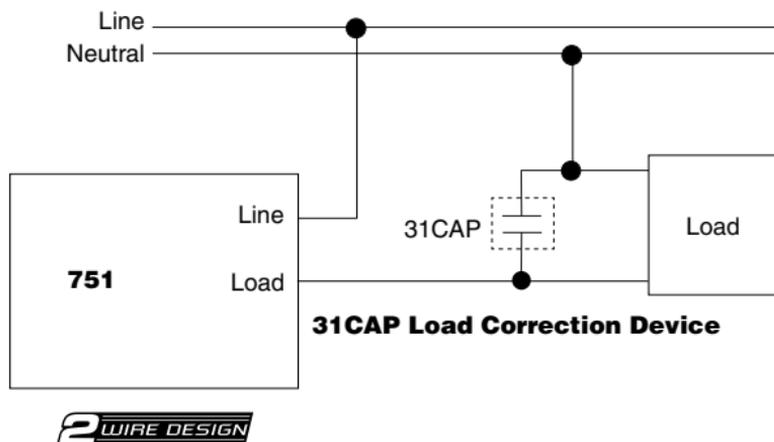

Note:

- Please note the 751R is a three wire device, and switches the load using an internal relay. Power is not drawn through the load and so the 31CAP is not required.

15.0 Warranty

1. The benefits conferred herein are in addition to, and in no way shall be deemed to derogate; either expressly or by implication, any or all other rights and remedies in respect to the Clipsal Product, which the consumer has under the Commonwealth Trade Practices Act or any other similar State or Territory Laws.
2. The warrantor is Clipsal Australia Pty Ltd of 33-37 Port Wakefield Road, Gepps Cross, South Australia 5094. Telephone (08) 8269 0511. With registered offices in all Australian States.
3. This Clipsal Product is guaranteed against faulty workmanship and materials for a period of two (2) years from the date of installation.
4. Clipsal Australia Pty Ltd reserves the right, at its discretion, to either repair free of parts and labour charges, replace or offer refund in respect to any article found to be faulty due to materials, parts or workmanship.
5. This warranty is expressly subject to the Clipsal Product being installed, wired, tested, operated and used in accordance with the manufacturer's instructions.
6. All costs of a claim shall be met by Clipsal Australia Pty Ltd, however should the product that is the subject of the claim be found to be in good working order all such costs shall be met by the claimant.
7. When making a claim the consumer shall forward the Clipsal Product to the nearest office of Clipsal Australia Pty Ltd with adequate particulars of the defect within 28 days of the fault occurring. The product should be returned securely packed, complete with details of the date and place of purchase, description of load, and circumstances of malfunction.

16.0 Technical Support and Troubleshooting

For all technical enquiries and assistance please contact our

National Customer Care Enquiries

Tel 1300 2025 25 (Call cost 25c, number valid within Australia only)

Fax 1300 2025 56

Clipsal Australia Pty Ltd

A member of Schneider Electric

clipsal.com

Contact us: clipsal.com/feedback

Clipsal Australia Pty Ltd reserves the right to change specifications, modify designs and discontinue items without incurring obligation and whilst every effort is made to ensure that descriptions, specifications and other information in this catalogue are correct, no warranty is given in respect thereof and the company shall not be liable for any error therein.

© Clipsal Australia Pty Ltd. The identified trademarks and copyrights are the property of Clipsal Australia Pty Ltd unless otherwise noted.